

Installation instructions

i Refer to installation use and maintenance manual for more information.




2 phase stepper drive technical data:

- AC power supply: 18 ÷ 100 Vac (mono or three-phase)
- AC logic supply: 18 ÷ 100 Vac (optional and not isolated) (monophase)
- Phase current: up to 8.5 Arms (12 Apeak)
- Chopper frequency: ultrasonic 40 kHz
- Stepper Control Technology (65536 position per turn)
- Protections against: over current, over/under voltage, overheating, short circuit between motor phase-to-phase and phase-to-ground
- Ethernet communication interface (Modbus TCP protocol)
- Encoder input (not isolated): 5V Differential (RS422) or 5V Single-Ended (TTL/CMOS) incremental encoder
- Service SCI interface for programming and real time debugging
- Up to 12 digital opto-coupled inputs (only SW5A4085E2J1-00) or 4 digital opto-coupled inputs (SW5A4085E241-00)
- Up to 10 digital opto-coupled outputs (only SW5A4085E2J1-00) or 2 digital opto-coupled outputs (SW5A4085E241-00)
- Dimensions: 165 x 120 x 48 mm (without connectors)
- Protection degree: IP20
- Pollution degree: 2
- Category C3 following standard EN 61800-3
- Working temperature 5°C ÷ 40°C; Storage temperature -25°C ÷ 55°C
- Humidity: 5% ÷ 85% not condensing




Mechanical data

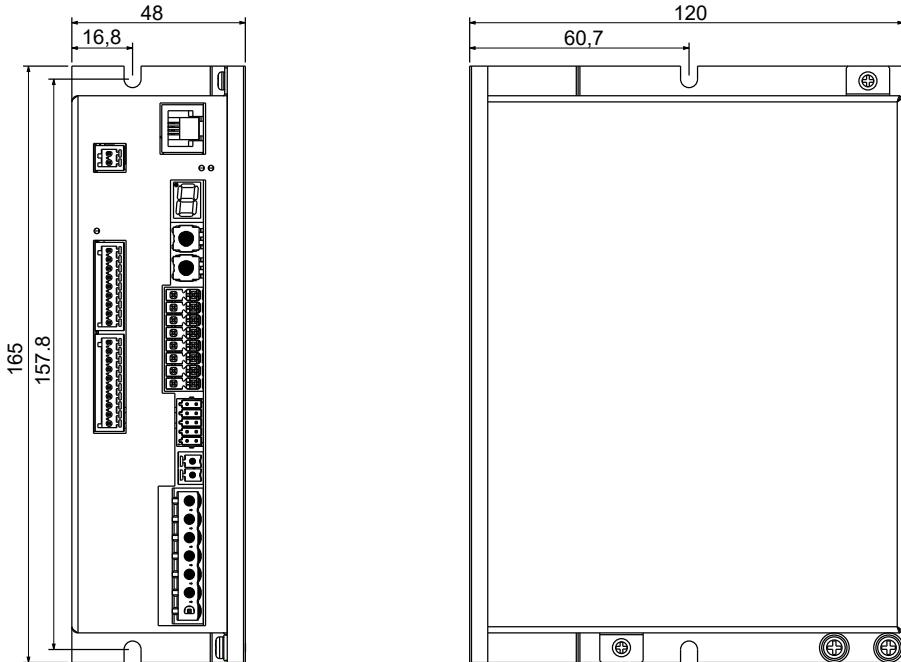

System connections

Connectors:

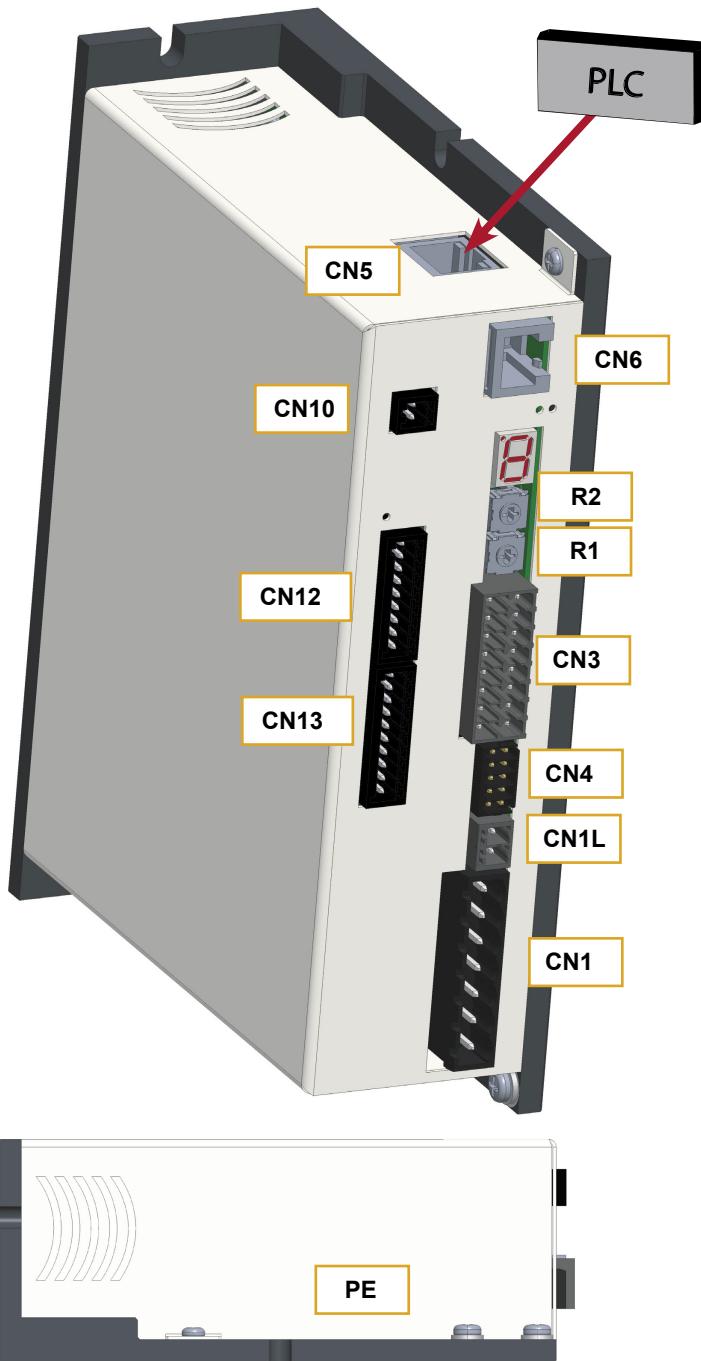


System connection

CN1: AC Power supply & Motor

7 positions, pitch 5.08mm, PCB header connector

| | | | |
|-------|------|---------|-----------------------------------|
| CN1.1 | ACin | PWR_IN | AC power supply input (18-100Vac) |
| CN1.2 | ACin | PWR_IN | AC power supply input (18-100Vac) |
| CN1.3 | ACin | PWR_IN | AC power supply input (18-100Vac) |
| CN1.4 | A | PWR_OUT | Motor output phase A |
| CN1.5 | A/ | PWR_OUT | Motor output phase A/ |
| CN1.6 | B | PWR_OUT | Motor output phase B |
| CN1.7 | B/ | PWR_OUT | Motor output phase B/ |

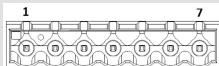

CN1L: AC Logic Supply

2 positions, pitch 3.81mm, PCB header connector


| | | | |
|--------|-------|--------|-----------------------------------|
| CN1L.1 | AClog | PWR_IN | AC logic supply input (18-100Vac) |
| CN1L.2 | VLOG | PWR_IN | AC logic supply input (18-100Vac) |



CN3: Digital Inputs / Outputs

16 positions, pitch 3.5mm double row, PCB header connector

| | | | |
|--------|---------|---------|--|
| CN3.1 | +B0_IN3 | DIG_IN | Digital input B0_IN3 positive side |
| CN3.2 | -B0_IN3 | DIG_IN | Digital input B0_IN3 negative side |
| CN3.3 | +B0_IN2 | DIG_IN | Digital input B0_IN2 positive side |
| CN3.4 | -B0_IN2 | DIG_IN | Digital input B0_IN2 negative side |
| CN3.5 | +B0_IN1 | DIG_IN | Digital input B0_IN1 positive side |
| CN3.6 | -B0_IN1 | DIG_IN | Digital input B0_IN1 negative side |
| CN3.7 | +B0_IN0 | DIG_IN | Digital input B0_IN0 positive side |
| CN3.8 | -B0_IN0 | DIG_IN | Digital input B0_IN0 negative side |
| CN3.9 | B0_OUT0 | DIG_OUT | PNP digital output B0_OUT0 |
| CN3.10 | B0_OUT1 | DIG_OUT | PNP digital output B0_OUT1 |
| CN3.11 | V-OUT | PWR_IN | 24Vdc input supply for digital output |
| CN3.12 | VSS | PWR_IN | Negative input supply for digital output |
| CN3.13 | n.c. | | Not connected |
| CN3.14 | n.c. | | Not connected |
| CN3.15 | n.c. | | Not connected |
| CN3.16 | n.c. | | Not connected |

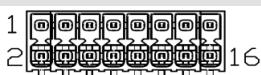

CN4: Encoder input connection

10 positions, pitch 2.54mm double row, PCB header connector

| | | | |
|--------|--------|---------|--------------------------------|
| CN4.1 | SHIELD | / | Cable shield connection |
| CN4.2 | SHIELD | / | Cable shield connection |
| CN4.3 | ENCZ+ | DIG_IN | Encoder Zero input positive |
| CN4.4 | ENCZ- | DIG_IN | Encoder Zero input negative |
| CN4.5 | ENCB+ | DIG_IN | Encoder Phase B input positive |
| CN4.6 | ENCB- | DIG_IN | Encoder Phase B input negative |
| CN4.7 | ENCA+ | DIG_IN | Encoder Phase A input positive |
| CN4.8 | ENCA- | DIG_IN | Encoder Phase A input negative |
| CN4.9 | +5V | PWR_OUT | +5Vdc power supply output |
| CN4.10 | GND | PWR_OUT | Negative side of supply |



CN10: I/O Expansion Supply (see drive version)

2 positions, pitch 2.5mm, PCB header connector



| | | | |
|--------|-------|--------|---|
| CN10.1 | +24V | PWR_IN | 24Vdc supply for I/O expansion |
| CN10.2 | VSS#2 | PWR_IN | Negative supply for I/O expansion and negative reference for digital I/O B1 |



CN12: Digital Outputs B1 (see drive version)

9 positions, pitch 2.5mm, PCB header connector

| | | | |
|--------|---------|---------|--|
| CN12.1 | B1_OUT0 | DIG_OUT | PNP digital output B1_OUT0 |
| CN12.2 | B1_OUT1 | DIG_OUT | PNP digital output B1_OUT1 |
| CN12.3 | B1_OUT2 | DIG_OUT | PNP digital output B1_OUT2 |
| CN12.4 | B1_OUT3 | DIG_OUT | PNP digital output B1_OUT3 |
| CN12.5 | B1_OUT4 | DIG_OUT | PNP digital output B1_OUT4 |
| CN12.6 | B1_OUT5 | DIG_OUT | PNP digital output B1_OUT5 |
| CN12.7 | B1_OUT6 | DIG_OUT | PNP digital output B1_OUT6 |
| CN12.8 | B1_OUT7 | DIG_OUT | PNP digital output B1_OUT7 |
| CN12.9 | VSS#2 | PWR_IN | Negative reference of expansion digital outputs B1 |

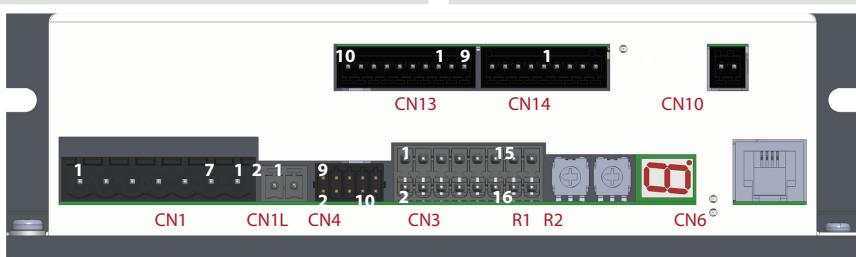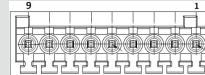


System connections

CN13: Digital Inputs B1 (see drive version)

10 positions, pitch 2.5mm, PCB header connector

| | | | |
|---------|-----------|--------|---|
| CN13.1 | B1_IN0 | DIG_IN | Digital input B1_IN0 |
| CN13.2 | B1_IN1 | DIG_IN | Digital input B1_IN1 |
| CN13.3 | B1_IN2 | DIG_IN | Digital input B1_IN2 |
| CN13.4 | B1_IN3 | DIG_IN | Digital input B1_IN3 |
| CN13.5 | B1_IN4 | DIG_IN | Digital input B1_IN4 |
| CN13.6 | B1_IN5 | DIG_IN | Digital input B1_IN5 |
| CN13.7 | B1_IN6 | DIG_IN | Digital input B1_IN6 |
| CN13.8 | B1_IN7 | DIG_IN | Digital input B1_IN7 |
| CN13.9 | B1_COM_IN | PWR_IN | Reference common digital inputs B1 |
| CN13.10 | VSS#2 | PWR_IN | Negative reference of expansion digital inputs B1 |

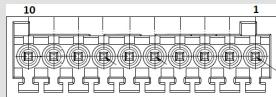

CN5: Ethernet Interface

RJ45, 8 positions shielded, PCB header connector

RJ45 connector
100BASE-TX (100Mb/sec) port
Accept standard Ethernet cable (CAT5 or higher)



CN6: Service SCI Interface

RJ11, 6P4C, PCB header connector

| | | |
|-------|-------|--------------------------------------|
| CN6.1 | TX/RX | Transmit / Receive Line |
| CN6.2 | DE/RE | Drive Enable Negated /Receive Enable |
| CN6.3 | +5V | +5V power out |
| CN6.4 | GND | GND power out |




This connection is only possible with hardware and software provided by Ever.



Service SCI connection



This connection is only possible with hardware and software provided by Ever.
Kit code: SW5-SERV00-SL or SW5-SERV00-EE.

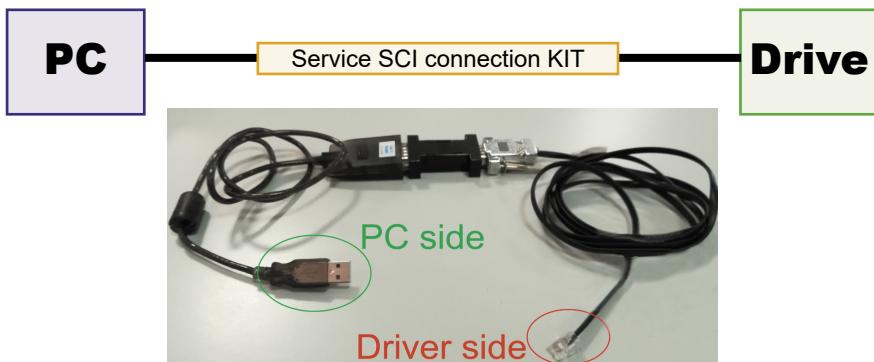


Roto-Switches settings


Ethernet IP Address (Last Significant Byte in Hexadecimal Value)

| | | | | | | | | | | |
|------------|-----------------------|---|---|---|------|----|----|------|-----|-----|
| R1 x 16 | 0 | 0 | 0 | 0 | | 2 | 2 | | F | F |
| R2 x 1 | 0 | 1 | 2 | 3 | | C | D | | E | F |
| IP Address | SW settings (default) | 1 | 2 | 3 | | 44 | 45 | | 254 | 255 |

x 16
(MSD)
R1

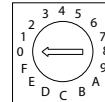

x1
(LSD)
R2

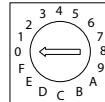

R1 (MSD): Most Significant Digit that must be multiplied per 16.

R2 (LSD): Least Significant Digit that must be multiplied per 1.

Example: 5C

$$R1 = 5 \rightarrow 5 \times 16 = 80$$

$$R2 = C \rightarrow 12 \times 1 = 12$$

$$\text{IP Address (Least Significant Byte)} = 92$$

Display Status


Operational statuses and their signals

| | |
|-------------------|---|
| L | Missing Operating System: no software application stored on drive |
| U | Firmware update: Updating of new software in progress. |
| I | Initialization: the drive executes the start-up procedure (a few seconds after the start-up procedure has begun). |
| S | Correct functioning |
| S + 1 | Voltage of DC bus near to the limit value (minimum or maximum) |
| S + 3 | Drive temperature is near to the maximum value |
| S + 0 | EEProm near Write Overrun |
| S + 8 | EEProm near End of Life |
| S flashing | Enable OFF, current zero |
| - flashing | $I_{nominal}$ not computed |
| E + 3 | Error: expired eePLC software trial |
| F + 0 | Security intervention of watchdog |
| F + 1 | Internal Software Error |
| F + 2 | Missing calibration values |
| F + 3 | Management EEPROM |
| F + 4 | EEPROM fail |
| F + 6 | eePLC application error |
| F + 7 | EEProm Write Overrun |
| F + U | Feature unavailable |
| P + 0 | Open motor phases |
| P + 1 | Over/under voltage; |
| P + 2 | Over current on the motor output; |
| P + 3 | Over temperature of the drive; |
| P + 5 | Mising Torque Enable ("missing Safe Torque Off") |
| P + 8 | Drive Over Power Protection and/or Current Regulation out of range |
| P + 0 | eePLC User Protection (generated by setting bit #0 of eePLC_User_Settings) |
| P + 9 | Motor feedback error |

Encoder input connection

Electrically NOT-isolated digital inputs:

- differential 5Vdc that meet the RS422 standard
- single-ended 5Vdc TTL/CMOS

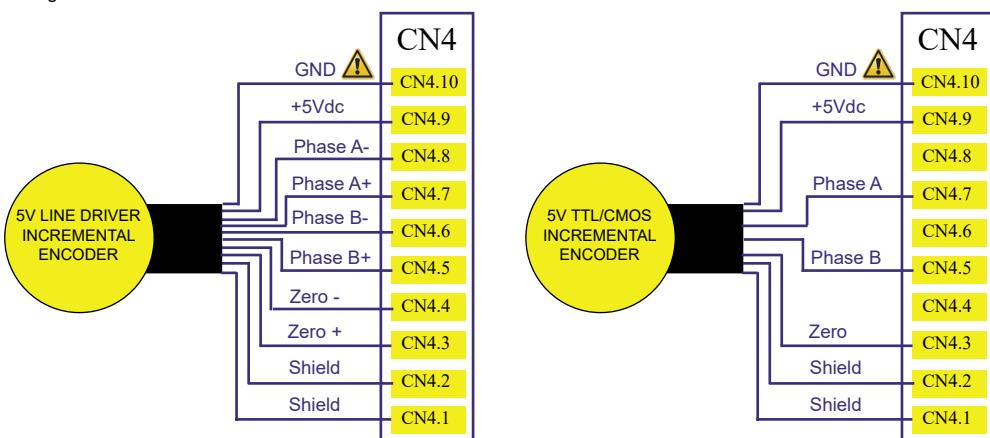


**⚠ GND is internally in common with power ground, this is potentially dangerous.
Take all necessary measures to avoid possible contacts in the final installation.**

Digital inputs connection


Digital input connection (B0_IN0 to B0_IN3)

i Differential PNP, NPN and Line Driver type.

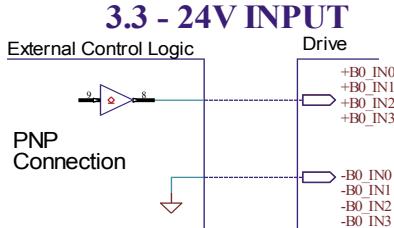

Digital inputs connection (B0_IN4 to B0_IN7)

i Single-Ended PNP, NPN, Push-Pull

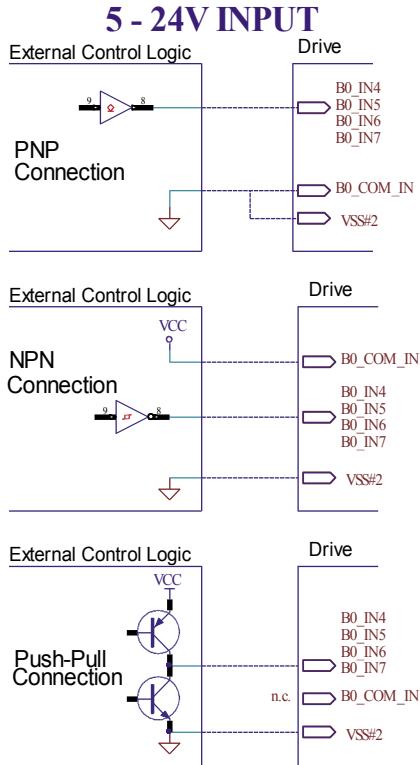

| Standard Digital Inputs (B0_IN0 and B0_IN1) | | | |
|---|---------------------|------|------|
| Characteristics | MIN. | MAX. | Unit |
| Supply voltage | 2 ⁽¹⁾ | 24 | Vdc |
| Inputs frequency | -- | 10 | kHz |
| Threshold switching voltage | 1.61 ⁽¹⁾ | -- | Vdc |
| Current at 2 Vdc | -- | 2.53 | mA |
| Current at 3.3 Vdc | -- | 5.84 | mA |
| Current at 5 Vdc | -- | 6.28 | mA |
| Current at 24 Vdc | -- | 8.75 | mA |

| Low-Speed Digital Inputs (B1_IN0 to B1_IN7) | | | |
|---|------|------|------|
| Characteristics | MIN. | MAX. | Unit |
| Supply voltage | 5 | 24 | Vdc |
| Inputs frequency | -- | 250 | Hz |
| Threshold switching voltage | 2,5 | -- | Vdc |
| Current at 5 Vdc | -- | 2 | mA |
| Current at 24 Vdc | -- | 12 | mA |

N.B.: All these inputs must be connected with the same configuration (PNP, NPN or Push-Pull).

| High-Speed Digital Inputs (B0_IN2 and B0_IN3) | | | |
|---|---------------------|------|------|
| Characteristics | MIN. | MAX. | Unit |
| Supply voltage | 2 ⁽¹⁾ | 24 | Vdc |
| Inputs frequency | -- | 500 | kHz |
| Threshold switching voltage | 1.61 ⁽¹⁾ | -- | Vdc |
| Current at 2 Vdc | -- | 2.53 | mA |
| Current at 3.3 Vdc | -- | 5.84 | mA |
| Current at 5 Vdc | -- | 6.28 | mA |
| Current at 24 Vdc | -- | 8.75 | mA |


(1) N.B.: It's recommended to use 2Vdc digital inputs only in differential Line-Driver configuration to have more noise immunity.

Digital outputs connection

Digital outputs connection (B0_OUT0 and B0_OUT1)




PNP with VOUTmax=24Vdc, IOUTmax=100mA, Fmax = 40kHz

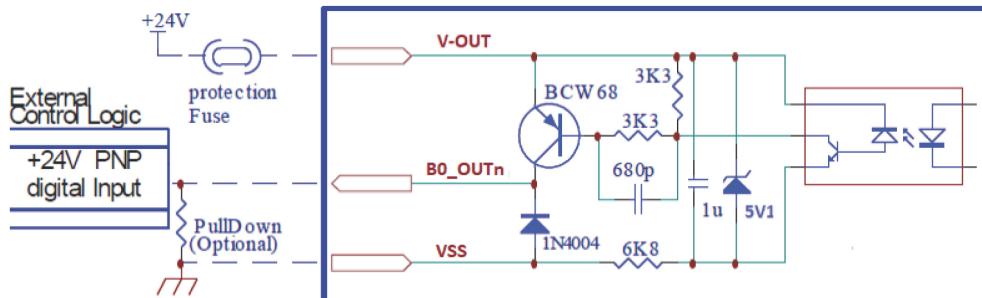

Digital outputs connection (B1_OUT0 and B1_OUT7)



PNP with VOUTmax = 24Vdc, IOUTmax = 100mA, Fmax = 250Hz

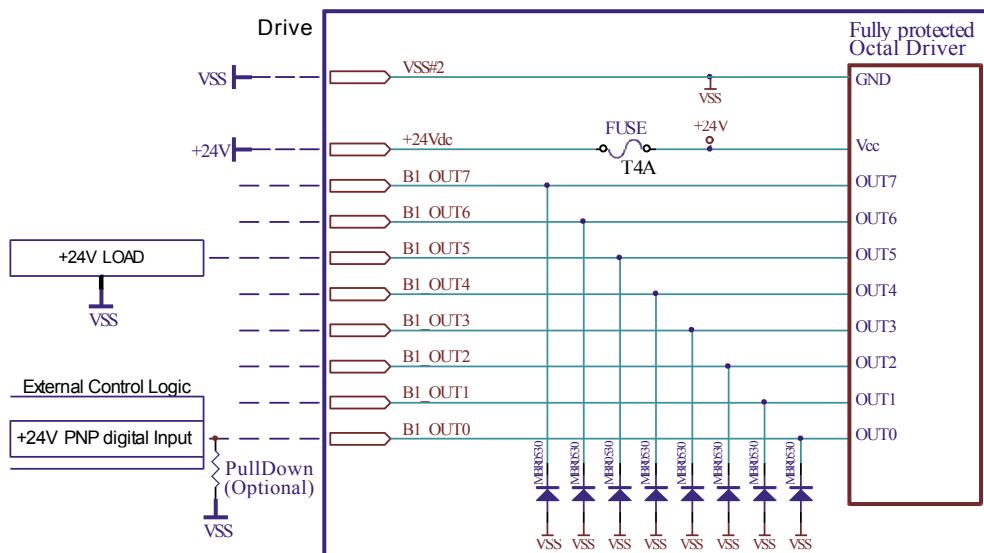

Mating connectors

| Connector | Description |
|-----------|--|
| CN1 | Phoenix 1758623 |
| CN1L | Phoenix 1827635 |
| CN3 | Weidmuller 1727690000 |
| CN4 | Phoenix 1844604 |
| CN5 | RJ45 for Ethernet standard cables (CAT5 or higher) |
| CN12 | Phoenix 1701061 |
| CN13 | Phoenix 1700841 |

Section of the cables

| Function | Cable | |
|-----------------------------------|---|------------------------------|
| | Minimum | Maximum |
| Power supply, Motor output and PE | 0.50 mm ² (AWG20) | 2.50 mm ² (AWG12) |
| Logic supply | 0.14 mm ² (AWG26) | 1.50 mm ² (AWG16) |
| Encoder input | 0.14 mm ² (AWG26) | 0.50 mm ² (AWG20) |
| Digital Inputs / Outputs and STO | 0.20 mm ² (AWG24) | 1.30 mm ² (AWG16) |
| Ethernet interfaces | Ethernet standard cables CAT5 or higher | |
| I/O Expansion | 0.14 mm ² (AWG26) | 0.50 mm ² (AWG20) |

Verify the installation

- Check all connection: power supply, logic supply, STO inputs and inputs/outputs
- Make sure all settings right for the application.
- Make sure the power supply is suitable for the drive.
- If possible, remove the load from the motor shaft to avoid that wrong movements cause damage.
- Enable the current to the motor and verify the applied torque.
- Enable a movement of some steps and verify if the rotation direction is the desired one.
- Disconnect the power supply, connect the load on the motor and check the full functionality.

Analysis of malfunctions

 When any of the following situations occur, the drive is placed in a fault condition.

| DEFECT | CAUSE | ACTION |
|--|--|---|
| Intervention of the thermal protection. | Can be caused by a heavy working cycle or a high current in the motor. | Improve the drive cooling by natural or fan air flow. Consider to use a motor with a higher torque vs current rating. |
| Intervention of the current protection. | Short circuit on the motor powering stage(s) of the drive. | Check motor windings and cables to remove the short circuits replacing faulty cables or motor if necessary. |
| Intervention of the over/under voltage protection. | Supply voltage out of range | Check the value of the supply voltage |
| Open phase motor protection. | Motor windings to drive not proper connection. | Check motor cables and connections to the drive. |

 When one of the following situations occur, the drive doesn't function correctly and it is reported an error.

| DEFECT | CAUSE | ACTION |
|---|---|--|
| Noisy motor movement with vibrations. | Can be caused by a lack of power supply to a phase of the motor or a poor regulation of the winding currents. | Check the cables and connections of the motor and/or change the motor speed to avoid a resonance region. |
| The external fuse on the power supply of the drive is burned. | Can be caused by a wrong connection of the power supply. | Connect the power supply correctly and replace the fuse. |
| At high speed, the motor torque is not enough. | Can be due to a "self-limitation" of motor current and torque. | Increase the motor current (always within the limits), increase the supply voltage, change motor connection from series to parallel. |

Ever Motion Solutions

Via del Commercio, 2/4 - 9/11

Loc. San Grato Z. I

26900 - L O D I - Italy

Phone +39 0371 412318 - Fax +39 0371 412367

email:infoever@evereletronica.it

web: www.evereletronica.it

